

Assembly & Operating Instructions

Ironmaster Cable Tower Seat


Congratulations on your purchase of this fine Ironmaster product. Be sure to read and understand the operating instructions to achieve the best performance and avoid injury.

The Ironmaster Cable Tower seat is an add on to the Ironmaster Cable Tower instead of using the Super Bench. **CAUTION:** The Seat is not designed to be used as a stand alone item, it must be attached and secured to the Ironmaster Cable Tower prior to use.

Contents:



Assembly:

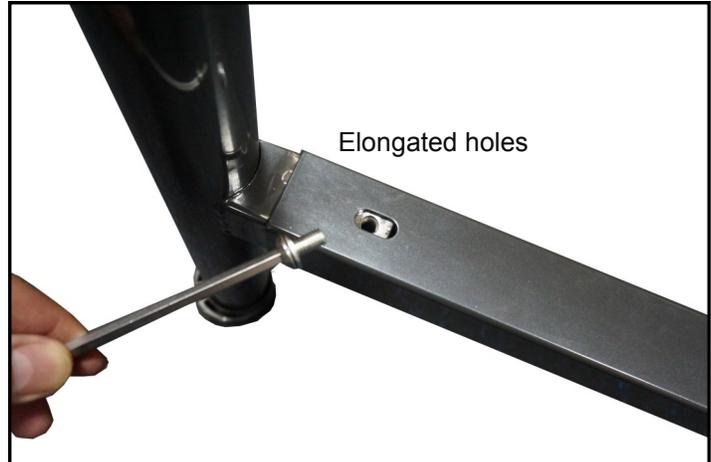

Step 2: Slide the BASE FOOT Stub into the SEAT FRAME as shown above. Secure bolts and washers.


Step 3: Once the BASE FOOT and SEAT FRAME are together, there are two ways to adjust height and fine tune. First, use the elongated holes to adjust overall seat height. Second, use the Eccentric End Caps to fine tune and to compensate for uneven flooring—only if necessary. Twist the End caps to the desired position. If the caps are on too tight you may need to tap them off with a hammer or wrench and push back in place.

Note: It is recommended to connect the SEAT to the TOWER before making the height adjustments.

Attaching Cable Tower Seat to Cable Tower:



Locate the PULL PIN which is under the front of the seat pad. Unscrew the PULL PIN until the Pin is in the unlocked position. Pull the PULL PIN and slide the CABLE TOWER SEAT onto the Cable Tower stub.

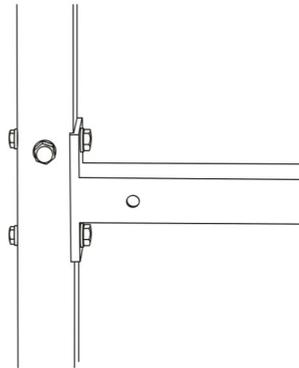

Once the PULL PIN snaps into the stub hole, tighten the PULL PIN to the locked position and make any necessary adjustments to seat height or leveling using the methods show on previous page.



The CABLE TOWER SEAT may also be used with the Ironmaster HYPERCORE attachment to make it a stand-alone use as shown above.

Note: Although this attachment has been tested as safe, use caution and exercise in a normal, safe manner to avoid movements that may cause any tipping of the equipment.

For customer service, contact your local distributor or:

Ironmaster LLC, 14562 167th Ave SE Monroe, WA 98272 USA

Web site: www.ironmaster.com Email: support@ironmaster.com Tel: 800-533-3339 or 1-360-217-7780

Warranty Information:

Ironmaster warrants to the original purchaser that this Home Fitness Product will be free from defects in workmanship and materials for a specific period from date of purchase based on the part type listed below. During the warranty period, Ironmaster will either repair or replace, at its option, defective part(s) at no charge. Warranty covers in home use only.

1 year for normal wear items such as rubber, upholstered parts and surface finishes.

10 years for frame and structural components.

Shipping costs are not included in the warranty and some items may need to be sent to Ironmaster for repair or replacement. Installation of any parts and labor involved is not included. The warranties described above shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described above, shall constitute complete fulfillment of all liabilities and responsibilities of Ironmaster to the purchaser with respect to the product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Ironmaster be liable or in any other way responsible for damages or defects in the product which were caused by repairs or attempted repairs performed by anyone other than Ironmaster or Authorized service Contractor. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear of the product purchased. Nor shall Ironmaster be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damage, so the above exclusion may not apply to you.